

THERMASOL®

THERMASOL STEAM SHOWER COMPONENT PLACEMENT GUIDE



PRO SERIES GENERATOR

- Can be installed up to 50 feet away from the shower
- Place in a finished climate-controlled space, away from weather conditions
- Allow for at least 6” clearance around all sides
- Accessible, do not seal behind walls or in bench
- Lying flat and horizontally (label reads left to right)



CONTROLLER

- 60” from the shower floor to the center of the controller
- Do not install adjacent to the SteamVection Steamhead



STEAMVECTION STEAMHEAD

- Install 24” from the shower floor & 6” from all corners
- Do not install under a seating area or bench
- Do not install adjacent to the controller



DIGITAL SHOWER VALVE

- Can be installed up to 30 feet from the shower
- Accessible, do not seal behind walls

ThermaSol employs a *Support Specialist Team* solely dedicated to customer service & support!

Whether your contractor/plumber is on site and requires installation support or you are turning on your new shower system for the first time, we are here to walk you through step by step to ensure an exceptional & exciting experience.

Customer Service & Technical Support

Monday – Friday / 8:00 A.M. - 5:00 P.M. (CST)

P: 1.800.776.0711

E: support@thermasol.com

Or schedule ahead for a Support Specialist to call you at thermasol.com/scheduleappointment.