



SHAKER™ KITCHEN COLLECTION



The Shaker™ apron front fireclay sink is a modern interpretation of the 1897 original. Named for the design movement that believed less is more, this Shaker farmhouse sink takes a minimalist approach. Instead of the iconic apron front with rounded corners, the Shaker has a clean, rectangular shape with squared-off sides and thinner walls for a slimmer, more minimal look. Durable and lustrous, its classic farmhouse roots and authenticity are always apparent. And like all Shaws® sinks, the Shaker is made by hand to last a lifetime.



MS3318



COLLECTION HIGHLIGHTS

FINISH
OPTIONS

WH



White

SINKS



UM2318



UM3018



MSUM3318



MS2418



MS3018



MS3318



MS3618



MS3320



MS3518



MS3918