





## CLASSIC, PRO, AND DESIGNER SERIES

To Enter Showroom Mode:

- 1 Touch .
- 2 Touch , then touch .
- 3 Touch .
- 4 Enter the Showroom mode password by touching the dashes until each symbol appears as pictured below.



- 5 Touch Showroom Mode. It may be necessary to scroll or swipe to see the words "Showroom Mode."
- 6 Touch Start to turn on Showroom mode. Touch Stop to turn off Showroom mode.

## PRO INDUCTION RANGE (KIT # 9067428)

### CONTENTS

2	Cord, 120 VAC
4	Bulb, 40 W halogen (sides)
2	Bulb, 25 W halogen (top)

**IMPORTANT NOTE: Depending on the model, additional components may be included with this kit, but not used.**

**IMPORTANT NOTE: 48" (1219) models have two terminal blocks. A cord must be connected to each block. For all other models, only one cord is used.**

### ENTER SHOWROOM MODE

The oven(s) enter Showroom Mode automatically. The rangetop requires a combination of knob turns to enter Showroom Mode.

**IMPORTANT NOTE: For 30" (762) and 36" (914) models, the knob sequence must be completed within 15 seconds. For 48" (1219) models, the knob sequence must be done twice, and each side must be completed within 15 seconds.**

For 30" (762) and 36" (914) models, complete steps 1-4. For 48" (1219) models, complete steps 1-8.

#### To enter Showroom Mode:

- 1 Turn and hold the **left rear** zone knob to "BOOST" until **A** appears on the rangetop display. **Do not release this knob.**
- 2 Turn the **left front** zone knob from "9" to "BOOST" five times. For each turn, release the knob when **P** disappears on the display.
- 3 **SHOW** appears on the display when in Showroom Mode.
- 4 Once in Showroom Mode, rotate both knobs to "OFF".
- 5 **For 48" (1219) models only**, turn and hold the **right rear** zone knob to "BOOST" until **A** appears on the rangetop display. **Do not release this knob.**
- 6 Turn the **right front** zone knob from "9" to "BOOST" five times. For each turn, release the knob when **P** disappears on the display.
- 7 **SHOW** appears on the display when in Showroom Mode.
- 8 Once in Showroom Mode, rotate both knobs to "OFF".

### SHOWROOM MODE KNOB SEQUENCE ANIMATION

For a visual reference of the showroom mode knob sequence, scan the code below.



### EXIT SHOWROOM MODE

**IMPORTANT NOTE: For 30" (762) and 36" (914) models, the knob sequence must be completed within 15 seconds. For 48" (1219) models, the knob sequence must be done twice, and each side must be completed within 15 seconds.**

For 30" (762) and 36" (914) models, complete steps 1-4. For 48" (1219) models, complete steps 1-8.

#### To Exit Showroom Mode:

- 1 Turn and hold the **left rear** zone knob to "BOOST" until **A** appears on the rangetop display. **Do not release this knob.**
- 2 Turn the **left front** zone knob from "9" to "BOOST" five times. For each turn, release the knob when **P** disappears on the display.
- 3 **SHOW** disappears on the display when in Showroom Mode.
- 4 Rotate both knobs to "OFF".
- 5 **For 48" (1219) models only**, turn and hold the **right rear** zone knob to "BOOST" until **A** appears on the rangetop display. **Do not release this knob.**
- 6 Turn the **right front** zone knob from "9" to "BOOST" five times. For each turn, release the knob when **P** disappears on the display.
- 7 **SHOW** disappears on the display when in Showroom Mode.
- 8 Rotate both knobs to "OFF".



## DUAL FUEL AND INDUCTION RANGE AND M/E SERIES OVEN (KIT # 828197)

### CONTENTS

1	Cord, 120 VAC
4	Bulb, 40 W halogen (sides)
2	Bulb, 25 W halogen (top)

### ENTER SHOWROOM MODE

- 1 Touch Settings.
- 2 Touch Showroom Mode.
- 3 Touch On.

### EXIT SHOWROOM MODE

- 1 Touch Settings.
- 2 Touch Showroom Mode.
- 3 Touch Off.


## CONVECTION STEAM OVEN, SPEED OVEN, AND SO2450 (KIT # 831419)

### CONTENTS


1	Step-up transformer
1	Showroom power cord, 120 V

This kit is required to place Convection Steam Ovens, Speed Ovens, and 24" E Series Ovens in Showroom mode (Demo mode). In Showroom mode, the lights and controls are enabled. All other operation is disabled.

### ENTER SHOWROOM MODE

- 1 Touch .
- 2 Scroll to and touch Service.
- 3 Use the number pad to enter 6301, then touch Ok.
- 4 Touch Demo mode, then touch On.

### EXIT SHOWROOM MODE


- 1 Touch .
- 2 Scroll to and touch Service.
- 3 Use the number pad to enter 6301, then touch Ok.
- 4 Touch Demo mode, then touch Off




## DROP-DOWN DOOR MICROWAVE OVEN

No kit needed. Connect directly to 120 V.

### ENTER SHOWROOM MODE

- 1 Touch .
- 2 Scroll to and touch Service.
- 3 Use the number pad to enter 6301, then touch Ok.
- 4 Touch Demo mode, then touch On.



### EXIT SHOWROOM MODE

- 1 Touch .
- 2 Scroll to and touch Service.
- 3 Use the number pad to enter 6301, then touch Ok.
- 4 Touch Demo mode, then touch Off



## INDUCTION COOKTOP

No kit needed. Connect directly to 120 V.

### ENTER SHOWROOM MODE

- 1 Touch  three times, then touch and hold  for five seconds.
- 2 Touch Demo mode.
- 3 Touch Active.
- 4 Touch the checkmark icon.

### EXIT SHOWROOM MODE

- 1 Touch  three times, then touch and hold  for five seconds.
- 2 Touch Demo mode.
- 3 Touch Inactive.
- 4 Touch the checkmark icon.



### **GAS COOKTOP**

No kit needed. Connect directly to 120 V.

- 1 On the bottom of the unit, remove the screw from the access panel.
- 2 Remove the red wire from the spark module.
- 3 Tape the connectors with electrical tape as a precaution.
- 4 Install the access panel and screw.

### **MULTIFUNCTION MODULE**

No kit needed. Connect directly to 120 V.

- 1 On the bottom of the unit, remove the screw from the access panel.
- 2 Remove the connection from the spark module.
- 3 Tape the connectors with electrical tape as a precaution.
- 4 Install the access panel and screw.



### **GAS RANGE**

Gas ranges do not have an available Showroom mode.

- For installation into a showroom or display setting, Wolf recommends connecting the unit only to a 120 VAC designated circuit.
- To restore full operation to the unit, connect it to a gas supply.
- When installed into 120 V only, sparking will still occur. If the user attempts to use and leave the griddle and/or oven on, the LED may flash to indicate ignition failure.



### DISHWASHER

While in Showroom mode, the Cove connect feature works to monitor and control the product using the Sub-Zero Group Owner's App.

### ENTER SHOWROOM MODE

- 1 Touch Cancel twice.
- 2 Touch and hold Options until "User Set Up" appears on the display.
- 3 Touch Options to scroll through user settings until "Showroom Mode" appears. The display will read "Showroom Mode Off."
- 4 Touch Enter. The display will read "Showroom Mode On."
- 5 Touch Cancel to exit the settings.

### EXIT SHOWROOM MODE

- 1 Touch Cancel twice.
- 2 Touch and hold Options until "User Set Up" appears on the display.
- 3 Touch Options to scroll through user settings until "Showroom Mode" appears. The display will read "Showroom Mode On."
- 4 Touch Enter. The display will read "Showroom Mode Off."
- 5 Touch Cancel to exit the settings.