

Light Option (if Light & Music System has been purchased)

Press the "Up" arrow until the light option, press "Enter/Select" button to activate light option. Use the "Up" or "Down" arrow to scroll through and change your settings. Press the "Enter/Select" button when you have reached the option that you would like to change. Once you have reached your desired option press the "Enter/Select" button to save your settings.

On/Off: Press "Enter/Select" to choose this option, then use the "Up" or "Down" arrow to choose either On or Off. Press the "Enter/Select" button to save your setting.


Shower Light: Press the "Enter/Select" button to choose this option.

Mood Light: Press the "Enter/Select" button to choose this option.

Custom Option: Press the "Enter/Select" button to choose this option. Using the "Up" or "Down" arrows select the color light you desire. Press the "Enter/Select" button to save your setting.

Chromotherapy: Press the "Enter/Select" button to choose this option. Using the "Up" or "Down" arrows select the body part you would like to focus on. Press the "Enter/Select" button to save your setting.

Brightness: While in any of the light options you can change the intensity of the light. Use the "Up" or "Down" arrow to change the intensity. Press the "Enter/Select" button to save your setting.

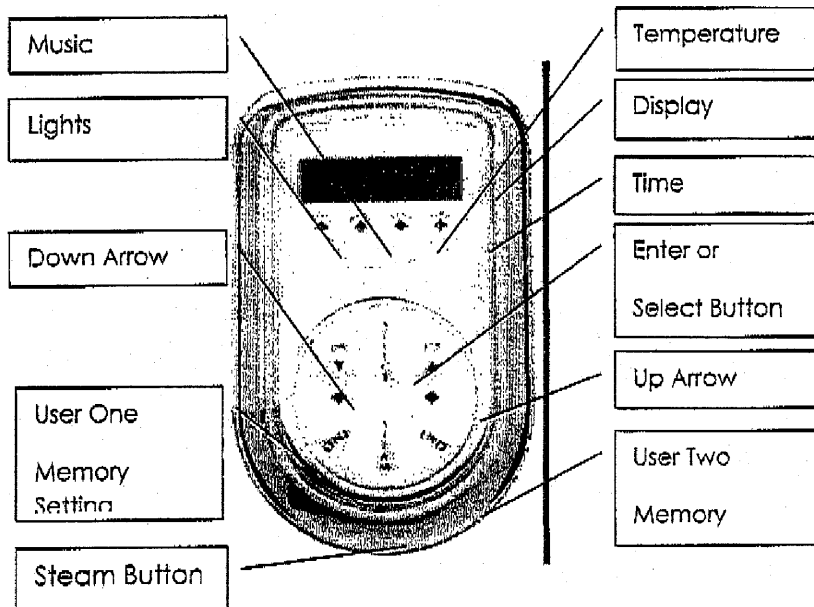

Setting the Clock

To set the clock press and hold the "UP" and "Down" arrows for 5 Seconds.

Set Clock will be displayed; press "Enter/Select" button and the time of day will show up.

Immediately after you press "Enter/Select" button press the "UP" or "Down" arrows to get to the correct time. Once you have reached the correct time press the "Enter/Select" button.

Starting a Steam

To start your steam shower press the "Steam" button once and the control will display steam on. Default setting is 100° and 20 minutes.

Set the Steam Session Timer-

Press the "Up" arrow until the time remaining is displayed. Press the "Enter/Select" button and the time will start to flash. Use the "Up" or "Down" arrows select the desired time. Once you have reached the desired time. Press the "Enter/Select" button to save your settings.

Set the Temperature


Press the "Up" arrow until the current room temperature is displayed. Press the "Enter/Select" button to make this option changeable. Using the "Up" or "Down" arrows select the desired room temperature. Once you have reached the desired temperature

To Activate Steam Shower Memory Settings for User 1 & User 2

Press either the "One" or "Two" button to activate the user setting, while the control shows User 1 or User 2 press the "Steam" button once to turn the steam on.

Press the "Up" or "Down" arrow until you see the time remaining displayed. Press the "Enter/Select" button and the time will start to flash. Use the "Up" or "Down" arrow to select the desired time. Press the "Enter/Select" button to save your settings.

Press the "Up" arrow until the current room temperature is displayed. Press the "Enter/Select" button to make this option changeable. Using the "Up" or "Down" arrows select the desired room temperature. Once you have reached the desired temperature press the "Enter/Select" button

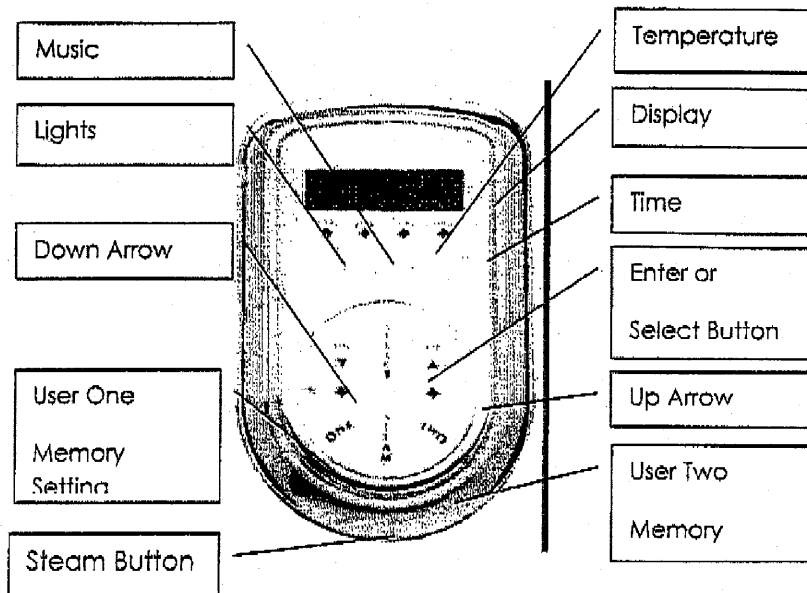

Music Option (if Light & Music System has been purchased)

Press the "Up" arrow until the Music option is displayed. Press "Enter/Select" to activate music option. Use the "Up" or "Down" arrow to scroll through and change your settings. Press the "Enter/Select" button when you have reached the option that you would like to change. Using the "Up" or "Down" arrows scroll through the settings once you are reached your desired setting press the "Enter/Select" button to save your settings.

On/Mute: Press "Enter/Select" to choose this option, then use the "Up" or "Down" arrow to choose either On or Mute. Press the "Enter/Select" button to save your setting.

Volume: Press "Enter/Select" to choose this option, then use the "Up" or "Down" arrow to choose the volume level. Once the desired

Base: Press "Enter/Select" to choose this option, then use the "Up" or "Down" arrows to choose the base level. Once the desired setting is reached press the "Enter/Select" button to save your setting.

Treble: Press "Enter/Select" to choose this option, then use the "Up" or "Down" arrows to choose the base level. Once the desired setting is reached press the "Enter/Select" button to save your setting.

Input Choice: Press "Enter/Select" to choose this option, then use the "Up" or "Down" arrows to choose the base level. Once the desired setting is reached press the "Enter/Select" button to save your setting.

Input 1 Input 2 FM Radio

Tune: While in the Music mode press the "Up" or "Down" arrows and select FM Radio. Press