


LuxTherm® 1-743 Function Guide

3-port, 4-function valve

tactile soft click function by design allows the user to accurately detect the activation and transition between each valve function.

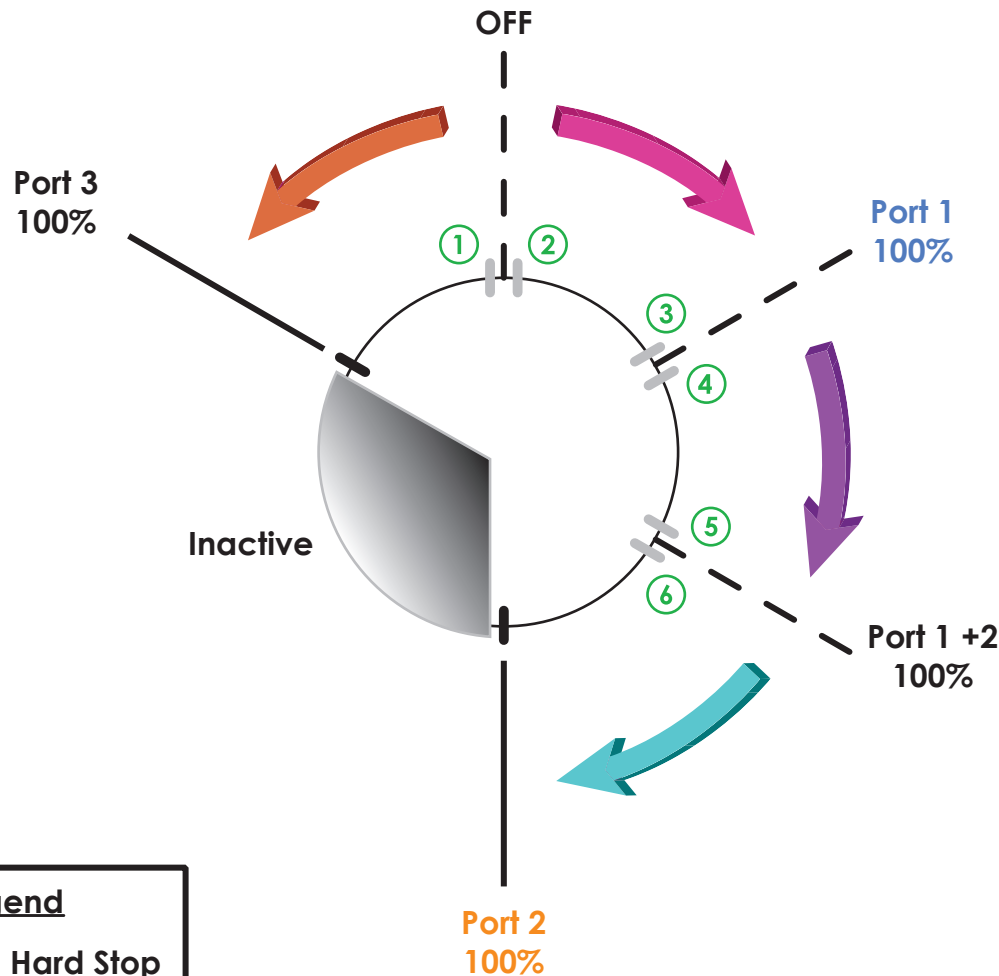

1. Soft Click 1
Activates Port 3
volume control up to hard stop
2. Soft Click 2
Activates Port 1
volume control up to Soft Click 3
3. Soft Click 3
Positive confirmation 100% usage of Port 1
4. Soft Click 4
Activates Port 2 (while Port 1 is running). *Shared Function*
Stage 1 of shared function.
Clockwise movement *increases* Port 2 flow.
5. Soft Click 5
Positive confirmation 100% usage of Port 1 + 2
6. Soft Click 6
Stage 2 of shared function.
Clockwise movement *decreases* Port 1 flow. 0% flow from Port 1 at the hard stop.